



CONTENTS

1	Introduction	7
1.1	Introducing AVEVA Bocad Structural Detailing™ 3.1	7
1.2	The User Bulletin	8
1.2.1	Using this Bulletin	8
2	AVEVA Bocad Structural Detailing™ 3.1	9
2.1	Workstation Configuration.....	9
2.2	Graphics Cards	10
2.2.1	Graphical Performance	10
2.3	Server Configuration	11
2.4	Prerequisite for this Release (Products).....	11
2.4.1	AVEVA Licensing™ 3.0.0	11
2.4.2	AVEVA Client Cache Service™ 1.0.5	12
2.4.3	Microsoft® Software.....	12
2.5	Compatibility with other AVEVA Products	13
2.6	Environment Variables	13
2.7	Network.....	14
2.8	Install	14
2.9	AVEVA Bocad Structural Detailing™ – Projects	14
2.10	AVEVA Bocad Structural Detailing™ – Documentation 3.1	14
2.11	Entering AVEVA Bocad Structural Detailing™ 3.1	15
3	Application Layout.....	17
3.1	User Interface.....	17
3.2	Ribbon Layout.....	19
3.2.1	Project.....	19
3.2.2	Home	20
3.2.3	Phase and Grid	20
3.2.4	View	20
3.2.5	Member.....	20
3.2.6	Connection.....	20
3.2.7	Output.....	21
3.2.8	Graphics.....	21
3.2.9	Tools	21
3.2.10	3D View.....	22
3.2.11	Viewport.....	22
3.2.12	Drawing.....	22
3.2.13	Nested Drawing	22
3.2.14	Basic Dimetry.....	23
3.2.15	Edit Outline	23
3.3	Forms.....	23
3.4	Message & Status Bar	25
3.4.1	Notifications	25
3.4.2	Messages.....	25
3.4.3	Status Bar	25
3.5	AVEVA PowerWheel™.....	25
3.6	AVEVA PowerCompass™	27
3.7	In Canvas Commands & Shortcuts	28
3.8	Tool-Tips.....	28
4	3D View	29
4.1	3D View Controls	29
4.1.1	View Limits.....	29
4.1.2	Zooming	29
4.1.3	Rotating the 3D View	29
4.1.4	View Direction	29
4.1.5	Panning.....	31
4.1.6	Centre View	31
4.1.7	Walk & Fly Modes	31
4.2	Clipping the View	32
4.3	Selecting Elements	33
4.3.1	Selecting Individual Elements	33
4.3.2	Using a Selection Window	34
4.4	Properties Grid.....	34
4.4.1	Object Snapping	35
4.4.2	Positioning aids.....	36
4.5	Creating Additional Views.....	37
4.6	Graphics Settings	37

5	Model Explorer and Flexible Explorer.....	39
5.1	Introduction	39
5.2	Model Explorer	39
5.3	Flexible Explorer	40
6	Integration.....	41
6.1	Integration with AVEVA Everything 3D™ 2.1	41
6.2	Integration with AVEVA E3D Insight™ 2.2.....	42
6.3	Comments	43
6.3.1	Comment Threads in the Database	45
6.4	Job Position and Orientation	45
7	Reporting	47
7.1	Introduction	47
7.2	Report creation	48
7.3	Default reports	49
7.4	Report Output formats.....	50
7.5	Report customization	51
7.5.1	General handling.....	52
7.5.2	Report data source	53
7.6	Report template storage.....	53
8	Administration and multi-user	55
8.1	Introduction	55
8.2	Dabacon Project Administration	55
8.3	Database and detailing element type	56
8.4	Multi-User	57
8.4.1	Introduction	57
8.4.2	Multiple user working in 1 Job - Claim / Unclaim elements	58
8.4.3	Files organization – sharing drawings.....	59
8.4.4	Project location	60
9	Additional Information.....	61
9.1	Functionalities compared with previous products	61
9.2	Client Configuration Data update	61
9.2.1	Libraries – import/export partial jobs	62
9.2.2	Undo Redo.....	62
9.2.3	Output translation table.....	62
9.2.4	Save Job	62
9.3	Element Ident number / deleted elements	63
9.4	Other limitations	63
Appendix A	Details of Sample Project	65
	AVEVA Bocad Sample Projects.....	65
	AVEVA Everything 3D – Projects 2.1	66
Appendix B	Keyboard Shortcuts & Commands	69
	Function Keys	69
	General Keys in Viewport.....	69
	Snap Mode.....	71
	Selection.....	71
	General Keys in 3D View	71
	In Canvas Commands (Only in 3D View)	72
Appendix C	Project Options.....	75
	Configuration	75
	Setting the Project Units	76
	View.....	77